

## WARNINGS

Warning! Intended for use with children from 2 years old up to 20 kg. weight.

Warning! Never leave your child unattended.

Warning! When going up or down steps, kerbs, stairs or escalators, ensure the child is not on the stroller board.

Warning! This product is not suitable for twin and tandem type pushchairs.

Warning! Always keep your hands on the pushchair when your child is standing on the platform.

Warning! Make sure your child is standing with both feet on the board before pushing the pushchair.

Warning! Check all connectors, arms and the wheels of the stroller board as well as the pushchair before using it.

Warning! Always ensure that all connectors and locking mechanisms are tightened prior to use.

Warning! Do not use this stroller board if any parts are broken or missing or worn.

Warning! Never let children play with the stroller board. When not in use, store away from children's access.

Warning! Always disconnect your stroller board before folding your pushchair. In some pushchair models you may need to disassemble the connectors as well.

## CLEANING AND MAINTENANCE

Regularly inspect all locking devices and connectors before using the stroller board.

If you have any difficulty with the wheels, ensure that dirt is not the cause.

Use a spray lubricant (e.g. WD40) for the wheels.

Sponge clean with warm water and mild detergent.

Always allow to dry or use a cloth to dry before using or storing.

Imported by Kooltrade Ltd. Denton, M34 3QA.

Customer Service 0161 335 2508



# ON BOARD



**Warning!** Read the instructions before use and keep for future reference.

Safety of your child is your responsibility.



## IMPORTANT

Keep for future reference

This stroller board is intended for children from 2 years age up to 20 kg.

Complies with the General Product Safety Regulations 2005  
(BSEN 1888:2003 + A1,2,3:2005 AND PD CEN/TR 13387:2004)



## ON BOARD

### Instructions

#### PARTS

##### Pic 1

1. Stroller board platform x 1
2. Arm support, Left x 1
2. Arm support, Right x 1
3. Connector, Left x 1
3. Connector, Right x 1
4. Wheels x 2
5. Wheel housing washers x 2
6. Hanging Strap x 1

#### ASSEMBLY

1 Place the stroller board platform upside down on a sturdy surface. Insert the washers in each wheel housing. **Pic 2**


2 To attach the wheels, align the wheels to the wheel housing **Pic 3** push the wheels firmly into the housing unit until you hear "click". **Pic 4**

3 Insert the support arms through the holes at each side of the board **Pic 5**. Push the arms till they are fully engaged. **Pic 6**

4 To attach the connectors on to the pushchair, press the adjuster button (1) and release the strap (2). **Pic 7**

5 Place the connector on the rear leg of the pushchair and ensure that the tube protector is in right position around the rear leg of the pushchair. **Pic 8**. Then, feed the strap (1) through the adjuster button (2). Adjust the height of the connector and tighten it firmly by adjusting the safety knob (3). **Pic 9**

**Warning! Avoid over tightening since it may affect the tube and the connector.**

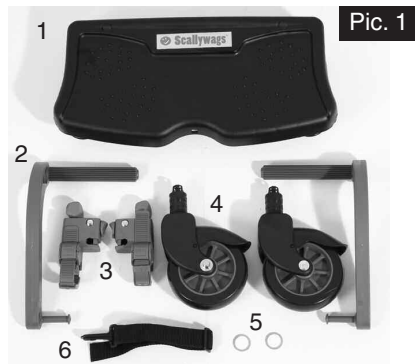

Pic. 2



Pic. 3




Pic. 4




Pic. 5



Pic. 6

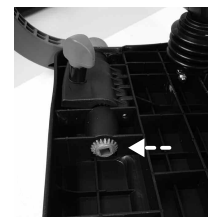

Pic. 7

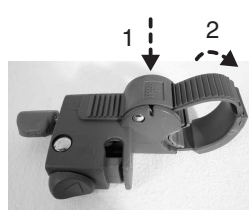

6 Ensure that both connectors are at the same level. To connect the stroller board arms, slide the quick release button (1) and place the arms into the slots (2). **Pic 10** Repeat the action for the other side. **Pic 11**

7 Adjust the stroller board platform parallel to the ground. Then secure the arms to the board by tightening the locks underneath the board. **Pic 12**

**Warning! Always ensure that the stroller board is parallel to the ground. Not doing so may affect the stability.**

8 This stroller board is suitable for most of the umbrella fold and A-fold pushchairs with a more upright rear legs. **Pic 13 and 14**

**Warning! This stroller board is unsuitable for the pushchairs without rear legs.**

9 Depending on the width of your pushchair, you may need to readjust the arms. First, undo the locks underneath the board. Then, slightly pull the arms outwards from the board and retighten both locks. Ensure both arms are evenly extended to the same length. **Pic 15**

**Warning! Do not extend the arm from the platform more than 2 cm for each side.**

10 To store your stroller board away, attach the hanging strap. **Pic 16**

**Warning! Never leave the strap on the board whilst in use.**

11 If you experience any difficulty applying the brakes on your pushchair, either;

- i - remove the stroller board by using quick release system **Pic 10** then engage the brakes.
- ii - tilt the stroller board upwards then engage the brakes.


Pic. 8



Pic. 9




Pic. 10

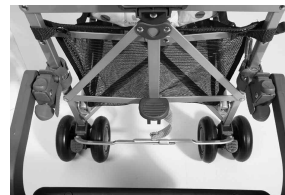

Pic. 11



Pic. 12

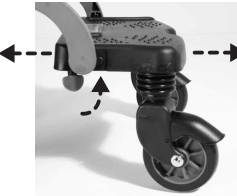

Pic. 13



Pic. 14



Pic. 15



Pic. 16

